

User manual



TABLE OF CONTENTS TABLE OF CONTENTS

TABLE OF CONTENTS	2
WARNINGS	3
EQUIPMENT	4
DESCRIPTION	5
CONFIGURATION	6
PRESET	9
ACCESSORIES	13
ARRAY EQ	18
MAINTENANCE	19
TECHNICAL SPECIFICATIONS	22
USER NOTES	23

WARNINGS

PRECAUTIONS

Do not open the speaker, do not try to disassemble it neither to modify it in any way. The system doesn't include any user-repairable part. If the system seems to be malfunctioning or damaged, stop using it at once and have it repaired by a NEXO qualified technician.

Do not expose the system directly to the sun or to the rain, do not immerse it into fluids, do not place objects filled with liquid on the system. If a liquid gets into the system, please have it inspected by a NEXO qualified technician.

When flying outdoor systems ensure that the system is not exposed to excessive wind or snow loads and is protected from rainfall. In case of wind greater than 8 on Beaufort scale (72km/h – 45mph), a touring system has to be landed or an additional securing has to be implanted.

For fixed installations, wind loading has to be taken into account in accordance to the national standards

The connection should be performed by qualified technician, by ensuring that power is off.

Operating temperature with temperate climate: 0°C to +40°C (+32°F to +104); -20°C à +60°C (-4°F to +140°F) for storage.

SAFETY INFORMATIONS

Read this manual before using the speaker.

Keep this manual available for further reference.

Observe all warnings and cautions.

Please check the NEXO Web site <u>nexo-sa.com</u> to get the most up-to-date version of this manual.

Ensure you are aware of the safety rules applying to rigging, stacking or installing on tripod or speaker stand. Failure to observe these rules may expose persons to potential wounds or even death.

Only use the system with accessories specified by NEXO.

Please always consult a NEXO-accredited technician if the installation needs architectural works and observe following precautions:

Mounting Precautions:

- Please select screws and mounting location supporting 4 times the system weight.
- Do not expose the system to excessive dust, vibrations, to extreme cold or hot temperatures, to reduce the risk of damaging components.
- Do not place the system in an unstable position: it could fall accidentally.
- If the system is used on a tripod, please ensure the tripod's specifications are adapted and that its height does not exceed 1.40m/55". Do not move the tripod with the system in position.

Connection and Powering Precautions:

- Unplug connected cables before moving the system.
- Power off the system before connecting the system.
- When switching on the installation, the amplifier must be powered last; when switching the installation off, shut off the amplifier first.
- If you work by cold temperatures, progressively raise the level to nominal value during the first minutes of use, to allow the system components to stabilize.

Please check regularly the system condition.

HIGH SOUND PRESSURE LEVELS

Exposure to very high sound pressure levels may cause permanent hearing losses. Degrees of hearing losses may be different from one person to another, but almost everybody will be affected if exposed to high sound pressure levels during a long period of time. The OSHA (Occupational Safety and Health Administration) American Agency specified the following maximal exposures:

Number of Hours	Sound Pressure Level (dBA), Slow Response
8	90
6	92
4	95
3	97
2	100
1 1/2	102
1	105
1/2	110
1/4 or less	115

WASTE OF ELECTRIC OR ELECTRONIC EQUIPMENT

This symbol on the product or its packaging indicates that this product must not be treated as household waste. Instead, it is your responsibility to hand it over to a designated collection point for the recycling of waste electrical and electronic equipment. By ensuring your


M210




waste equipment is recycled, you will help prevent potential negative consequences for the environment and human health, which could appear if this product was not recycled. Recycling helps spare natural resources. For more information about the recycling of this product, please contact your local city office, your household waste disposal service or your reseller.

EQUIPMENT

2 locations for hanging.

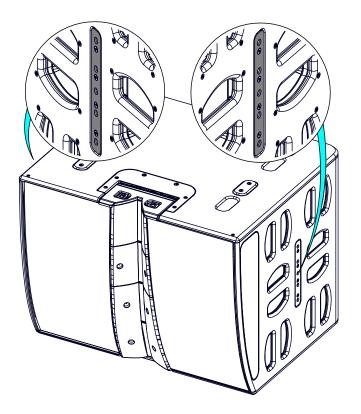


Orientation HF

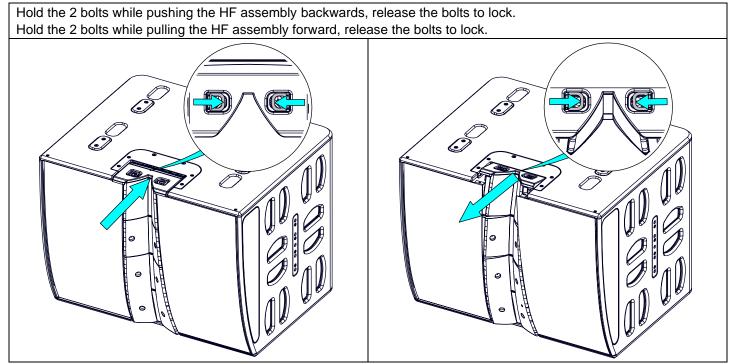

DESCRIPTION

- \rightarrow The M210 is a compact and powerful 2 ways system.
- \rightarrow The M210 is equipped with two Speakon NL4 connectors, with parallel-wired pins,
- \rightarrow M210 uses the 1+/1- and 2+/2- pins.

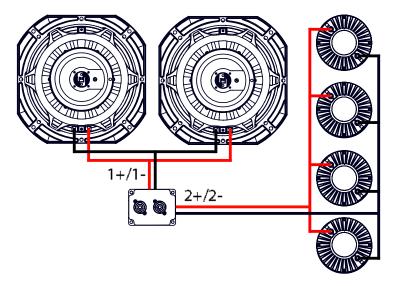

→ Amplification


- The M210 must be used with a NEXO processor to handle EQ, phase alignment, crossover and excursion/thermal protection for the system loudspeaker.
- The following table shows the number of M210 subwoofers usable with each solution.

	SPEAKER TYPE	NXAMP4X1mk2	NXAMP4X2mk2	NXAMP4X4mk2
B218	Bass	1 per channel (bridged)	1 per channel (bridged)	Up to 2 per channel
L20	Sub	1 per channel (bridged)	1 per channel (bridged)	Up to 2 per channel
M210	2 ways active	Up to 2 per amplifier	1 on 2 channels	Up to 2 on 2 channels


CONFIGURATION

➤ 1x M210

Wide position is the recommended default mode.

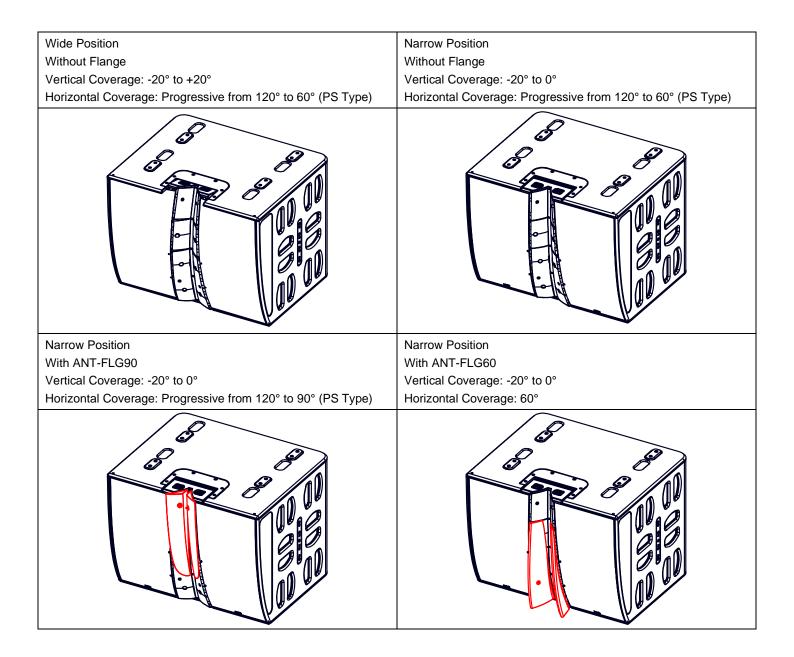


≻ 2x M210

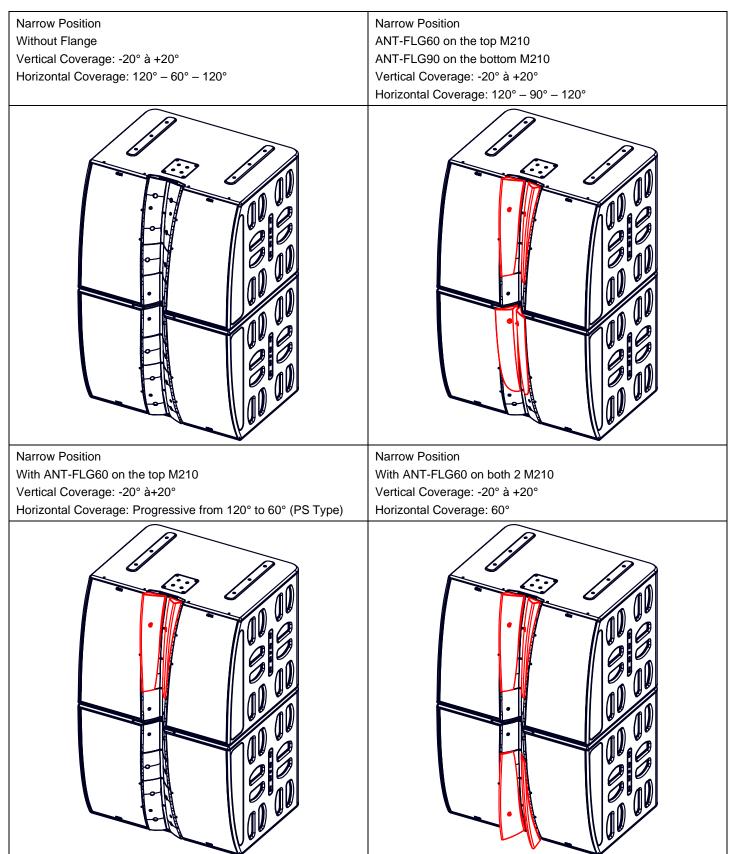

CONFIGURATION

Narrow Position With ANT-FLG90 on both 2 M210 Vertical Coverage: -20° à +20° Horizontal Coverage: 120° – 90° – 120°

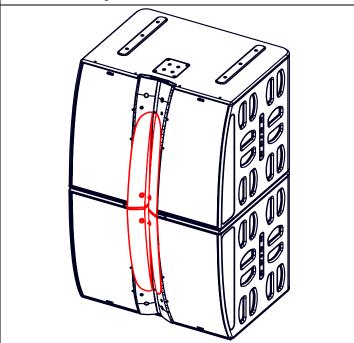

PRESET

Please consult <u>nexo-sa.com</u> for NEXO TD Controllers firmware information.


The Alpha+ M210 must always be used with its companion bass module the B218


(ratio :1x B218 for 1x M210)

> STACK 1 Column:


1 or 2 L20 / 1x B218 / 1x M210 (Narrow – Wide)


2 L20 / 1x B218 / 2x M210 (Narrow)

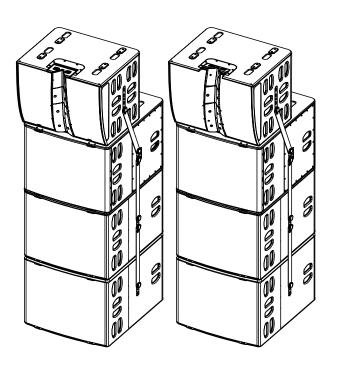

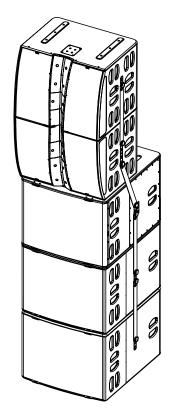


4x L20 / 2x B218 / 2x M210 (Narrow)

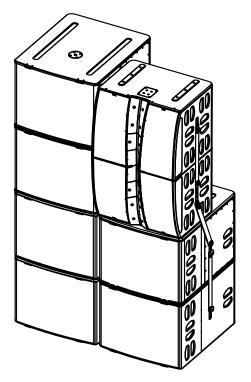


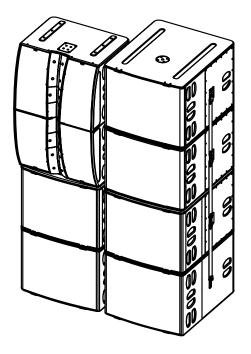


> FLOWN 1: 1x M210 (Narrow – Wide)

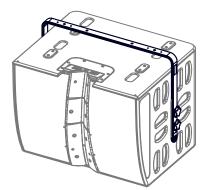


> FLOWN 2: 2x M210 (Narrow)

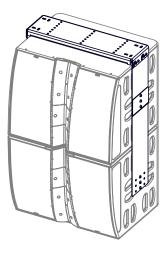



> FLOWN 3: 1x B218 / 1x M210 (Narrow – Wide)

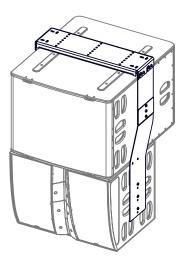

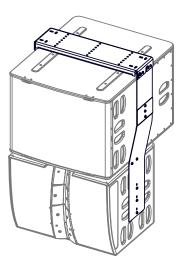

PRESET > FLOWN 4: 1x L20 + 1x B218 or 2x B218 / 1x M210 (Narrow – Wide)

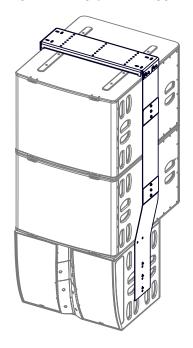

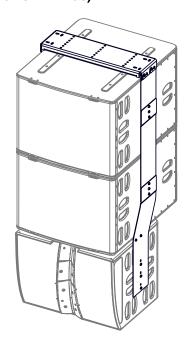

ACCESSORIES

WARNINGS


All M210 accessories are specifically rated in agreement with structural computations.

Never use other accessories – including push-pins – when assembling M210 cabinets than the ones provided by NEXO: NEXO will decline responsibility over the entire M210 accessory range if any component is purchased from different supplier. All M210 accessories have been designed so that cabinet are arrayed vertically.

PROHIBITED: M210 below M210 or M210 below B218/L20 without dedicated accessory

VNU-HBRK01 (LNU-HBRK20)

Horizontal Cradle, use with M210 CLADAPT.

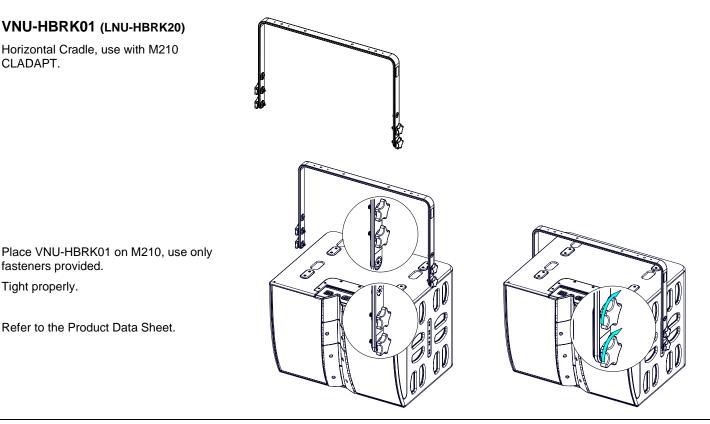


fasteners provided. Tight properly.

Refer to the Product Data Sheet.


VNI-CLADAPT (PNI-CLADAPT)

 
Ceiling adapter, use with VNU-HBRK01.




Place the assembly on CLADAPT, use the 2 guides. Tight with the fasteners provided with CLADAPT.

Refer to the Product Data Sheet.

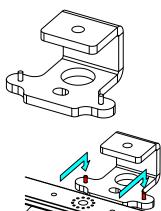

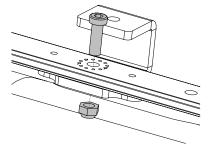


Rigging System M210 sous M210

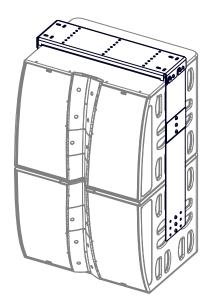

Refer to the Product Data Sheet.

ANI-LK02


Rigging system M210 under 1x B218

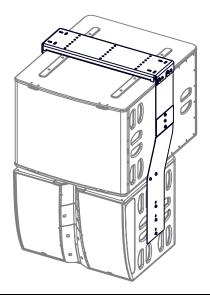

Refer to the Product Data Sheet.

ANI-LK03

Rigging System M210 under 2x B218/L20

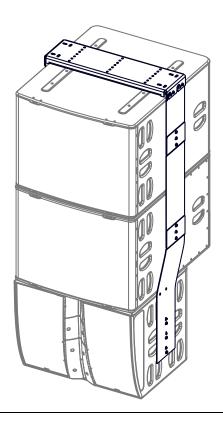


Refer to the Product Data Sheet.

ANI-EXB01

Kit barres d'extension pour ANI-LKxx

Refer to the Product Data Sheet.

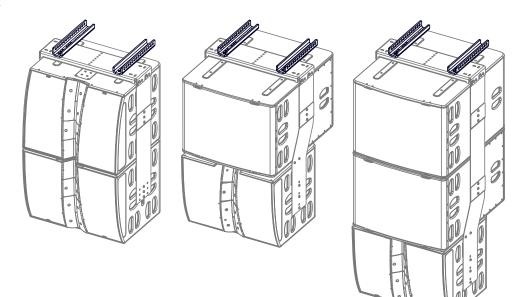


ACCESSORIES

ANT-FLG60

Flange 60° for M210


Refer to the Product Data Sheet

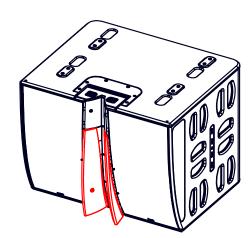

ANT-FLG90

Flange 90° for M210


Refer to the Product Data Sheet

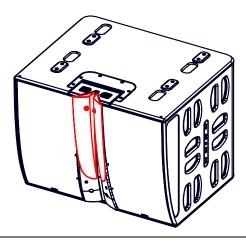

VNT-CPL04

Link B218/M210 - M210/M210


Refer to the Product Data Sheet

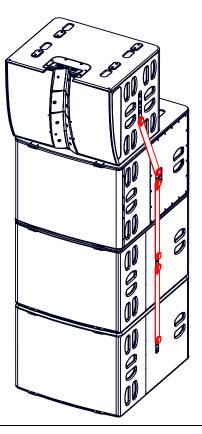


VNT-CAS01

Kit casters

Refer to the Product Data Sheet

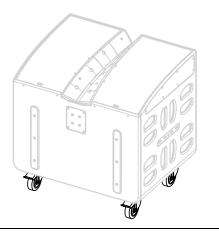

ANT-COVM210 : COVER FOR M210

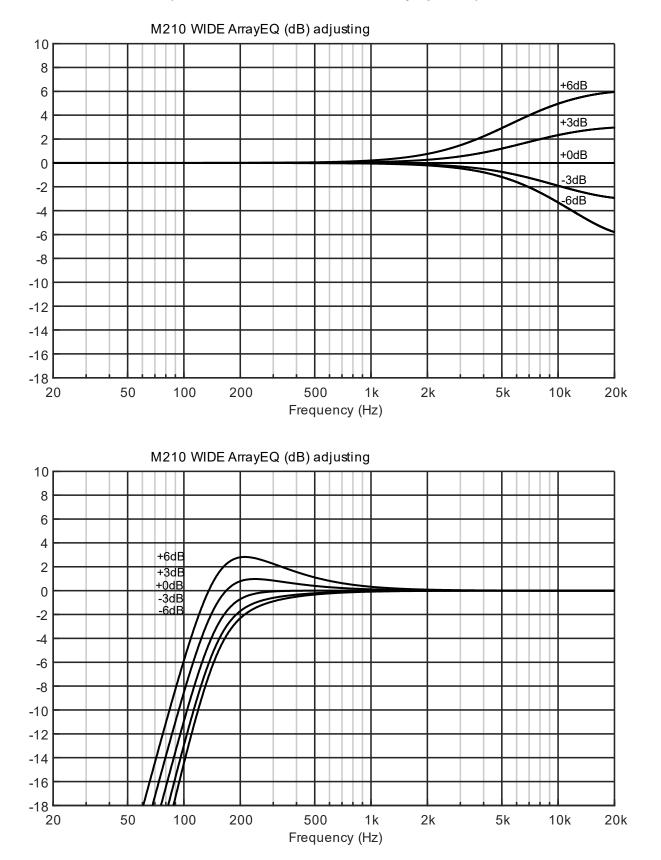

The ArrayEQ allows to adjust the system frequency response in its lower range (see curves below, with different ArrayEq values):


MAINTENANCE


Grille Changing: Remove 8 screws


Remove 2 screws from bottom and one from top corner

Pull the bottom of the grille forward..

Release the grille from the lug at the top of the HF block.

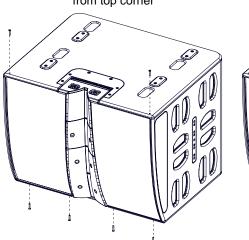


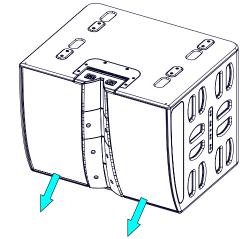

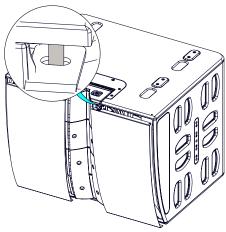


Side Grille Changing

Remove the 7 screws on each side, remove the side grilles When reassembling, **pay attention** to screw lengths: the 4 longest are for the inner side.

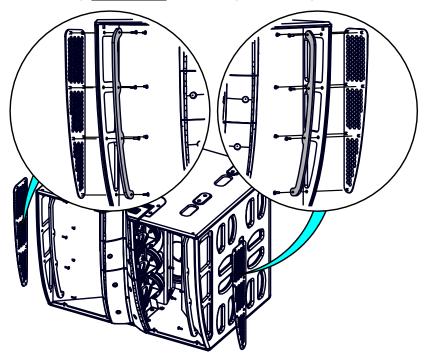


MAINTENANCE Removing HF Block

Remove 4 screws on the bottom. Remove 6 screws on the top.

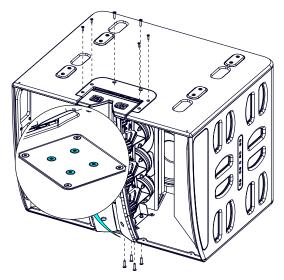


Removing HF

Remove 4 nuts + washers. Pull HF motor back.

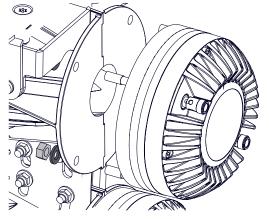


Removing 10" Drivers


Retirer les 16 vis. Disconnect wires from CNX and Drivers 10". Retirer la trappe.

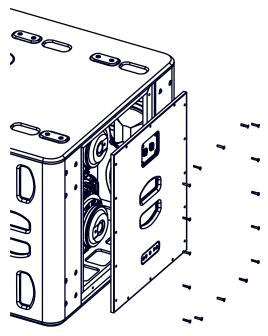


First release the bottom of the HF block, then the top. Be careful not to trap your fingers in the HF guides. Disconnect cable

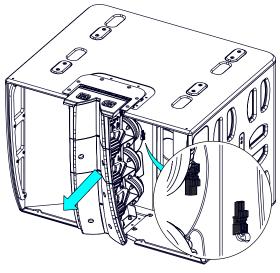


Remove 4 screws to access diaphragm.

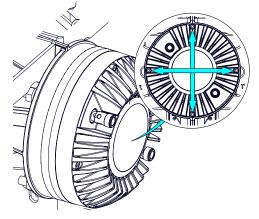

Retirer les vis pour sortir les haut-parleurs

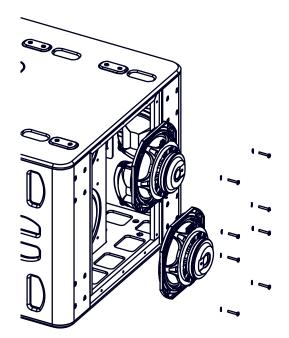

Spare parts

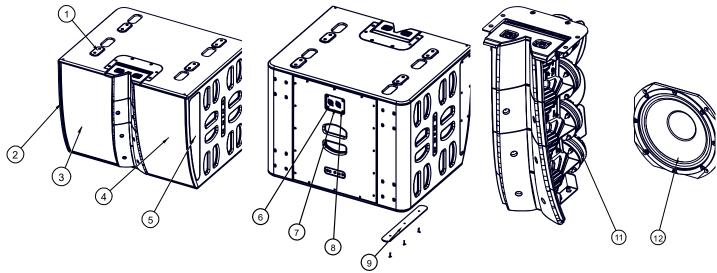

MARK	QUANTITY	REFERENCE	DESIGNATION
1	4	05SKID02	Top rubber Skid Black (with fasteners)
	4	05SKID02-PW	Top rubber Skid White (with fasteners)
2	1	05M210UA-LS	Complete side left grille Black (with fasteners)
	1	05M210UA-LSPW	Complete side left grille White (with fasteners)
3	1	05M210UA-L	Complete left grille Black (with fasteners)
	1	05M210UA-PWL	Complete left grille White (with fasteners)
4	1	05M210UA-R	Complete right grille Black (with fasteners)
	1	05M210UA-PWR	Complete right grille White (with fasteners)
5	1	05M210UA-RS	Complete side right grille Black (with fasteners)
	1	05M210UA-RSPW	Complete side right grille White (with fasteners)
6	1	05LEXCNX-M210	Lexan CNX M210 Black
	1	05LEXCNX-M210PW	Lexan CNX M210 White
7	1	05CNX2SP44T	Connection plate Black without lexan (with fasteners)
	1	05CNX2SP44T-PW	Connection plate White without lexan (with fasteners)
8	2	05CNXNL4MDV-1	Speakon NL4 MDV1
9	2	05SKID03	Rubber Skid Black (with fasteners)
	2	05SKID03-PW	Rubber Skid White (with fasteners)
10	4	05HPADE78TN-16	Hf Driver 3" Output 1.4" Neodynium - 16 Ohm
	1	05NH78TN-16R/K	Hpade780tn-16 Diaphragm
11	2	05HPB10-4	Hp 10" Bass Neodynium 4 Ohms
	1	05HPB10-4R/K	Recone Kit For Hp 10" Bass Neodynium 4 Ohms


TECHNICAL SPECIFICATIONS

M210 WITH NEXO ELECTRONICS

Model	M210
Frequency range (±6dB)	160 Hz – 20 kHz
Peak SPL Level (1m)	148 dB Peak
Operating voltage	45 Vrms (150 Vpeak)
Crossover Frequency	500 Hz to 1500 Hz overlap, optimized with proprietary software NEXO Polar Combiner
Vertical Directivity	Adjustable: Wide (-20°/+20°) or Narrow (-20°/+0°)
Horizontal Directivity	120° (Bottom) to 60° (Top) continuously (PS Type)
Nominal Impedance	$4\Omega + 4\Omega$

SPECIFICATIONS

Model	M210	
Components	MF: 2x High-efficiency pure medium neodynium 10" – 8 ohms HF; 4x neodymium 3" voice coil, 1.4" throat driver on BEA/FEA optimized Wavesource	
Material	Baltic birch / Poplar plywood	
Finish	Black or white structural paint	
Front finish	Magnelis [®] Steel front grille	
Fittings	Handles on both sides Threated inserts on both sides for connection of mounting accessories Threated insert on the back for connection of universal accessory	
Connector	2x NL4, 4 poles connectors	
Weight	53 kg / 117 lb	
Dimensions	Narrow Position	

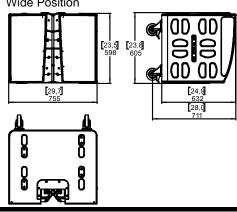

USER NOTES

USER NOTES



NEXO S.A.

Parc d'activité de la Dame Jeanne F-60128 PLAILLY Tel: +33 3 44 99 00 70 Fax: +33 3 44 99 00 30 E-mail: <u>info@nexo.fr</u>

nexo-sa.com